PREPARATION SST (SPECIAL SERVICE TOOLS)

MT004-01

OOT (OF LOIAL O		
	09213–36020 Timing Gear Remover	
	09308–00010 Oil Seal Puller	
	09308–10010 Oil Seal Puller	
	09312–20011 Transmission Gear Remover & Replacer	
9	(09313–00010) Reverse Gear Remover	
	(09313–00030) Rear Bearing Replacer	
	(09313–00040) Plate wAw	
	(09313–00050) Plate wBw	
	09316–60010 Transmission & Transfer Bearing Replacer	
	(09316–00010) Replacer Pipe	
	09325–20010 Transmission Oil Plug	
	09506–35010 Differential Drive Pinion Rear Bearing Replacer	
	09608–12010 Front Hub & Drive Pinion Bearing Replacer Set	

	(00000 00000) D	
	(09608–00020) Remover & Replacer Handle	
	(09608–00050) Drive Pinion Front Bearing Cup Replacer	
	09608–20012 Front Hub & Drive Pinion Bearing Tool Set	
	(09608–00080) Replacer	
	(09608–03020) Handle	
	09608–35014 Axle Hub & Drive Pinion Bearing Tool Set	
Q	(09608–06020) Handle	
	(09608–06090) Front Hub Outer & Steering Worm Bearing Replacer	
	(09608–06100) Front Hub Outer Replacer	
01 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1	09950-00020 Bearing Remover	
Ĥ.	09950–00030 Bearing Remover Attachment	
	09950–20017 Universal Puller	

MT005-01

RECOMMENDED TOOLS

09031–00030 Pin Punch	
09905–00012 Snap Ring No. 1 Expander	
09042-00020 Torx Socket t40	

EQUIPMENT

LQUIFIVILIAI	
Dial indicator or dial indicator with magnetic base	
Torque wrench	

LUBRICANT

MT007-02

Item	Capacity	Classification
Manual transmission	2.6 liters (2.7 US qts, 2.3 Imp.qts)	API GL-4 SAE 75W-90 or 80W-90

SSM (SPECIAL SERVICE MATERIALS)

MT008-01

08826–00090 Seal Packing 1281, Three bond 1281 or equivalent	Transmission case x Intermediate plate Front bearing retainer x Transmission case
08833–00080 Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	Straight screw plug Front bearing retainer bolt