TROUBLESHOOTING

You will find the troubles using the table well shown in this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these parts.

	Jumps	Hard to	Oil leakage	Noise		
	Jumps out of gear	Hard to shift or will not shift	(age		Parts Name	See page
					Oil (Level low)	_
				2	Oil (Wrong)	MT2-2
			د-		Oil (Level too high)	-
			2		Gasket (Damaged)	MT2-10
			2		Oil seal (Worn or damaged)	MT2-14
			ω		O–Ring (Worn or damaged)	MT2-10
					Locking ball spring (Damaged)	MT2-10,1
 	2				Shift fork (Worn)	MT2-11
	ω			ω	Gear (Worn or damaged)	MT2-11
	ω			з	Bearing (Worn or damaged)	MT2-11
					Synchronizer ring (Worn or damaged)	MT2-25,33
		2			Shifting key spring (Damaged)	MT2-25,3